

ARMS & EXPLOSIVES STORAGE

Armories & Protected Storage Containers



ISO 20' Container Based Armory

for 600 M4 carbines and 10.000 bullets 5.56X45 NATO

Armory Container features:

- Window on the door 50cmX70cm Non Spall type (NS) type level IV+.
- Estimated weights:

Container empty: 9.500 kgs.



Container with rifles and ammo: 15.000 kgs.

- Metal reinforcement at floor and walls with metal sheets of 400 Brunel thickness 6mm.
- Roof will feature 3 weakend zones for easy relief of the internal blast
- 40mm PUR thermo insulation at walls, floor and roof,
- Physical ventilation with anti-blast protection.
- Emergency rescue facility.
- Micro phonic and mega phonic communication.
- 3 overlap layers made of solid wood with thickness 2,5cm of each layer.
- Lifting/tie-down points at each corner.
- Locks.
- Automatic self-extinguishing system of CO2.
- Inside temperature alarm system.
- Communication interphone at the door.
- Anti-blast type electrical installation.
- A/C 18.000 btu inverter mod Daikin.
- Overpressure relief valves 2 pcs.
- Grounding.
- External Roof lights at corners (4 pcs) led type.
- Color: optional any RAL


Also included:


- Rifle open racks for 600 M4 Carbines
- Ammunition storage (cool, dry, dark) for 10.000 bullets 5.56X45 NATO

3 Roof weekend zones

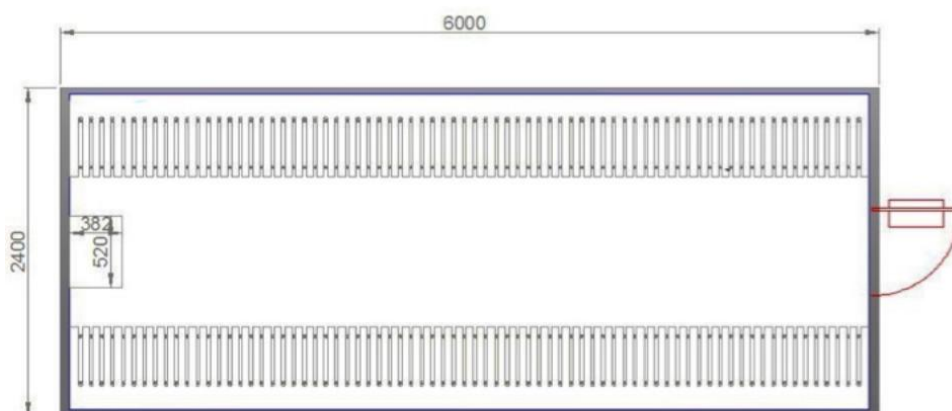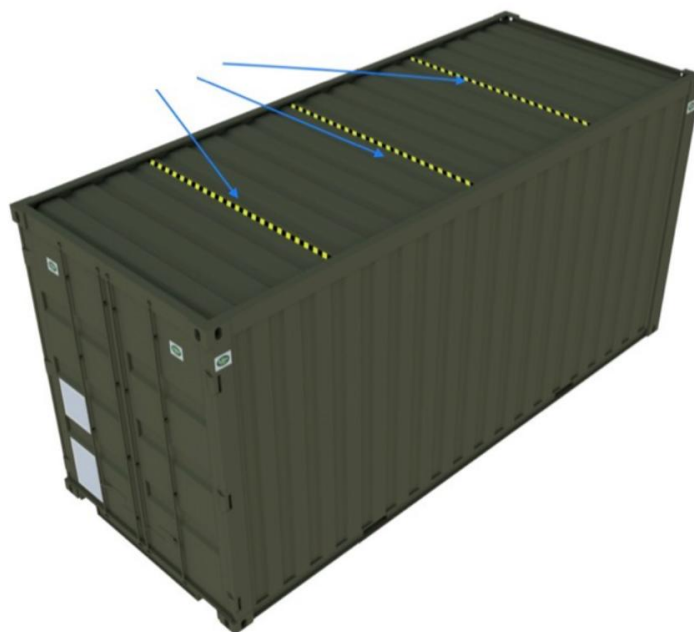

SECTION ISO 20' ARMORY

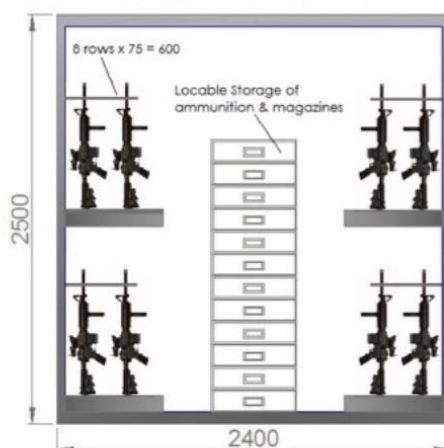

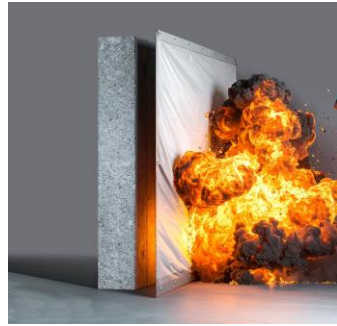

About Atmas

Atmas Group is a Finland-based global supplier of products, technologies, project support services and complete solutions in the areas of civil defense shelters and protected spaces, facilities reinforcement against CBRN, blast, ballistic, forced entry and EMP threats, as well as security, safety and emergency response.

Atmas is trusted by customers and partners around the world providing a unique combination of solutions "under one roof", with a focus on advanced technologies, product customization, uncompromised service and comprehensive project support.

Atmas Group Oy

Hermannin rantatie 3A

00540 Helsinki

Finland

+358 449843373

info@atmasgroup.com

www.atmasgroup.com