

SU-III RWRT

Shelter Blast Hatch

- Blast rating: 4.4 bar (440 kPa)
- Opening direction: top
- Splinter/Ballistic Protection: optional with armour plate
- Installation options: casting / retrofit
- Locking mechanism: multipoint, lever
- Equipped with seal for water/gas tightness









Overview

SU-III RWRT shelter hatches are designed for up to 440 kPa (4.4 bar) blast pressure (top opening) according to existing technical norms for civil defence shelters. The hatch leaf is made from reinforced beams with cover plates and the hatch equipped with gas lift supports for easier opening. The hatches can be upgraded with armour plates for splinter / ballistic protection and special materials for fire resistance.

SU-III RWRT hatches have a multipoint locking system with lever, providing improved protection against blast wave pressure and equipped with rubber seal for gas tightness.



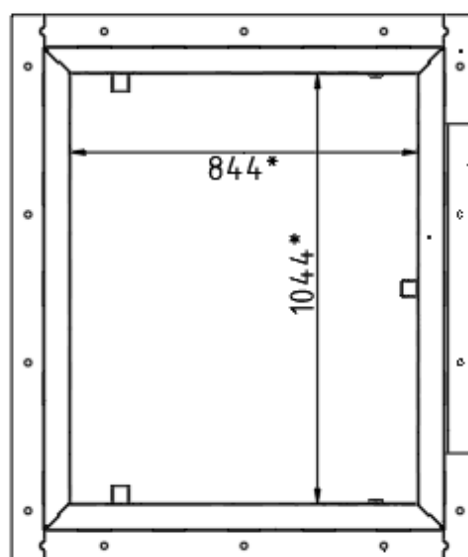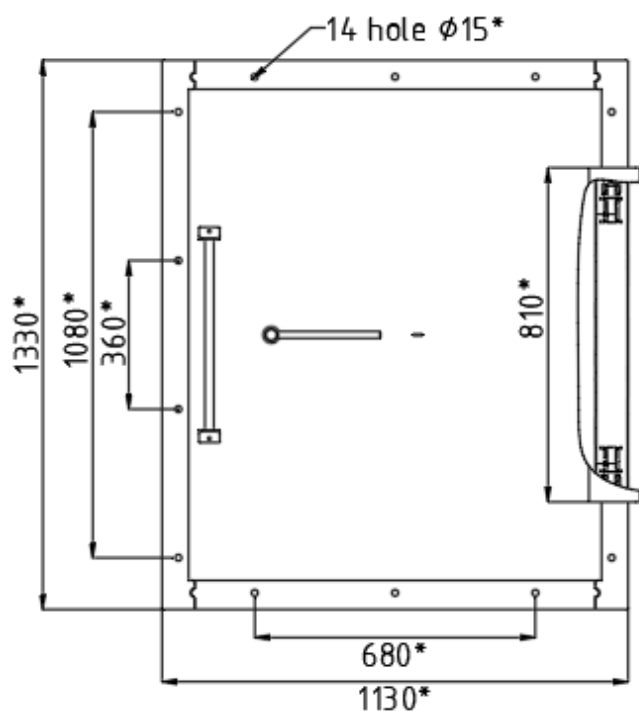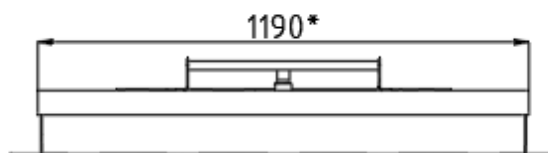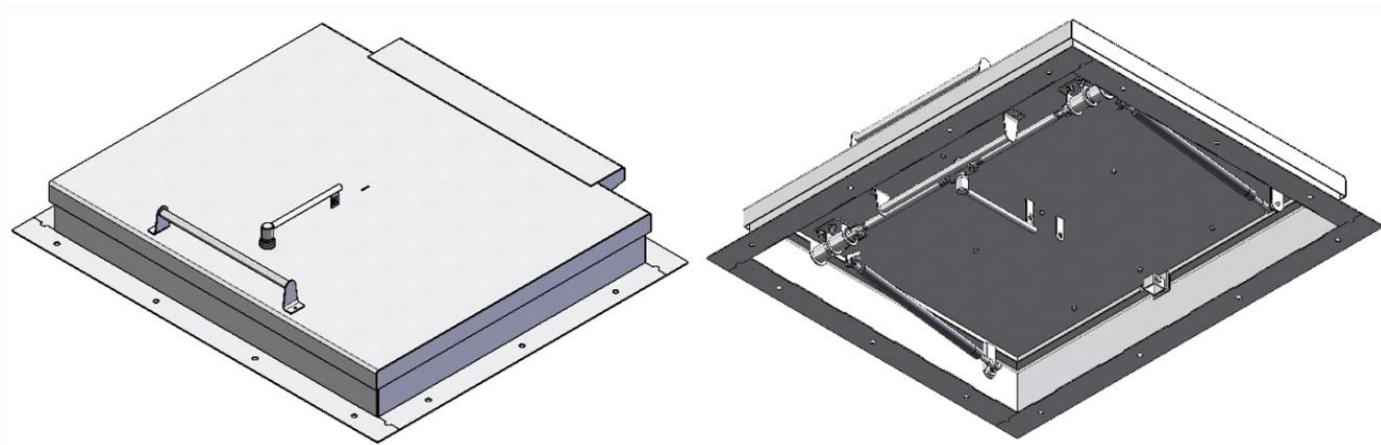

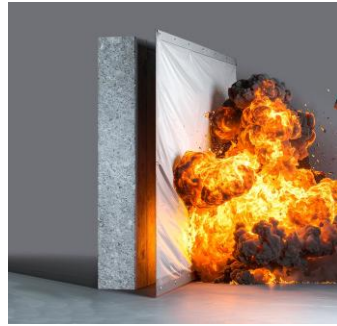

Atmas Group is a Finland-based global supplier of products, technologies, project support services and complete solutions in the areas of civil defense shelters and protected spaces, facilities reinforcement against CBRN, blast, ballistic, forced entry and EMP threats, as well as security, safety and emergency response.

Atmas is trusted by customers and partners around the world providing a unique combination of solutions “under one roof”, with a focus on advanced technologies, product customization, uncompromised service and comprehensive project support.

Atmas Group Oy

Arielinkatu 2

00540 Helsinki

Finland

+358 449843373

info@atmasgroup.com

www.atmasgroup.com